



Infrared Digital Forehead Thermometer

User Manual



HOW TO USE

Aim towards the forehead from a distance of 5cm, press the measuring key. The temperature will display immediately. Make sure there is no hair, perspiration, cosmetic or cap covered on the forehead.

Environment Temperature

Press the measuring key, and then press LEFT button. The environment temperature will display immediately.

Memory

After measurement, press the right button to save the measurement result. Only body temperature and surface temperature can be saved.



SETTINGS

Press and hold SET button to enter the setting mode. Press SET once to switch setting from F-1 to F-5.



F-1 Units

Press LEFT to display °F. Press RIGHT to display °C.



F-2 Temperature Alarm

Press LEFT and RIGHT button to set an alarm temperature. When the body temperature exceeds a certain temperature, an alarm will be given.

Surface
Body



F-3 Modes

Press LEFT for surface temperature. Press RIGHT for body temperature.



F-4 Calibration

Default is 0. You can set the temperature deviation.



F-5: Alarm (ON-OFF)

Press LEFT button to turn on the alarm sound. Press RIGHT button to turn it off.

Measuring body temperature with forehead temperature

- Please clean your forehead before measurement to prevent hair, sweat or dirt from affecting the measurement accuracy
- Since the sensor is sensitive to the ambient temperature, do not hold the temperature sensor for a long time

Measure the temperature of objects and rooms

- After each measurement, clean the temperature head with a soft cloth and then store the machine in a dry and ventilated place
- If the product material and function break down or be damaged and affect your regular use, our company will provide a free warranty service within one year from the date of purchase.

Warranty description

- Please properly keep the warranty card as maintenance certificate;
- The warranty period is valid within one year from the date of purchase;
- During the warranty period (under the condition of normal use and maintenance), if the product failures due to the problems of its material and functions, our company will provide free maintenance and parts replacement services.

The warranty notice

For the goods beyond the warranty period or outside free maintenance service clause, our company can also provide maintenance services but need to charge the parts and maintenance fee, taking into consideration the circumstances.


The following situations are not covered by the warranty

- The equipment and components are beyond the warranty period;
- Due to human factors (such as using the product not following the instructions, error operation or improper safekeeping; human-made scratch; carrying and shock; input voltage and current not matching the product, etc.), leading to equipment failure or damage;
- Users alter or tear down the machine, or tear up the product barcode.
- OAXIS Asia Pte Ltd reserves the right of final interpretation of this warranty clause.



プロフェッショナルな精度 赤外線デジタル額温度計

ユーザーマニュアル

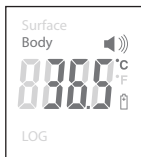

使い方

人体温度測定: おでこを露出し、汗を拭いてから、5cmの距離からおでこの真ん中に当てて、測定スイッチを押します。

環境温度測定

測定スイッチを押してから、左ボタンを押します。環境温度がすぐに表示されます。

メモリー

測定後、右ボタンを押すと測定結果が保存されます。保存できるのは体温と表面温度のみです。

設定

SETボタンを長押しして設定モードに入ります。SETを1回押すと、設定がF-1からF-5に切り替わります。



F-1 温度単位

左ボタンを押すと°Fが表示されます。右を押すと°Cが表示されます。



F-2 温度アラーム

左または右ボタンを押して警報温度を設定します。体温が一定温度を超えるとアラームが鳴ります。

Surface
Body



表面温度を表示するには、左ボタンを押します。体温は右ボタンを押してください。



F-4 キャリブレーション

デフォルトは0です。温度偏差を設定できます。



F-5 アラーム (ON-OFF)

左ボタンを押すとアラーム音が鳴ります。右ボタンを押してオフにします。

おでこの温度で体温を測定

- 髪、汗、汚れが測定精度に影響しないように、測定前に額をきれいにしてください
- センサーは周囲温度の影響を受けやすいため、温度センサーを長時間押さないようにしてください

ものと部屋の温度を測定

- 測定後は、柔らかい布でセンサーを拭いて乾燥した換気の良い場所に保管してください。
- 弊社では購入日より1年以内に無料保証サービスを提供いたします。詳しくは弊社のホームページの保証についてまでご参照ください。

保証について

- 詳しくは弊社のホームページの保証についてまでご参照ください。
<https://oaxis.com/ja/warranty>